

## Selecting a vehicle profile (assets)

Before driver's logs can be exported and shared with an authorized agent, the driver must update the correct vehicle information. Please tap on the truck or trailer image to pick from the asset list downloaded during the login (see list below) or to manually enter (if allowed) a new truck or trailer. Once you select a tractor or trailer from the downloaded list the ELD will always use the VIN number, license plate and registration state displayed on the list.

The screenshot shows the 'Vehicle Profile' screen. At the top, there are two circular icons: a tractor and a trailer. Below these are two sections: 'Tractor Information' and 'Trailer Information'. Each section has a list of fields with icons for Tractor Number, Tractor VIN, Tractor Lic. plate, and Tractor Registration State/Province. The 'Trailer Information' section has a similar list of fields. At the bottom, there are two input fields for 'Dash odometer (Miles)' and 'Confirmation (Miles)', and an 'Operating Mode' dropdown set to 'ELD'.

**Tractor Information:**

- Tractor Number: 123
- Tractor VIN: 8888888888888888
- Tractor Lic. plate: FL000C0
- Tractor Registration State/Province: FL

**Trailer Information:**

- Trailer Number: 7856
- Trailer VIN: 45646464621
- Trailer Lic. plate: HMAA56
- Trailer Registration State/Province: CO
- Trailer Number: Trailer4
- Trailer VIN: DSVF
- Trailer Lic. plate: sdfvsdf
- Trailer Registration State/Province: DC

Dash odometer (Miles) \_\_\_\_\_ Confirmation (Miles) \_\_\_\_\_

Operating Mode ELD

**Important:** Enter your vehicle's dashboard's odometer value (twice) in order for the ELD to adjust discrepancies between the dashboard and engine odometer.