



Roadside Inspection Process Guide

Apollo and Linxup ELD Logs


From the Apollo Home screen Select the Officer Icon:

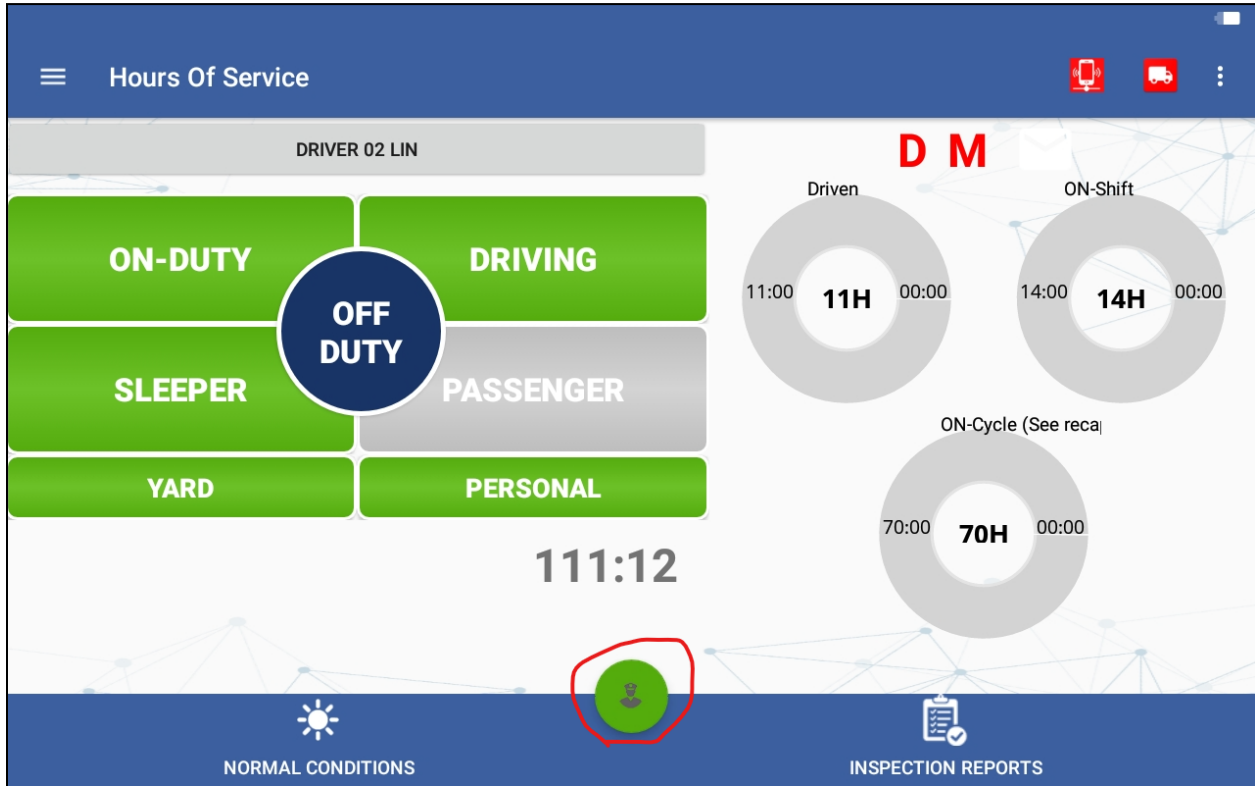

DOT Officer will have the options to choose how they want to review the logs:

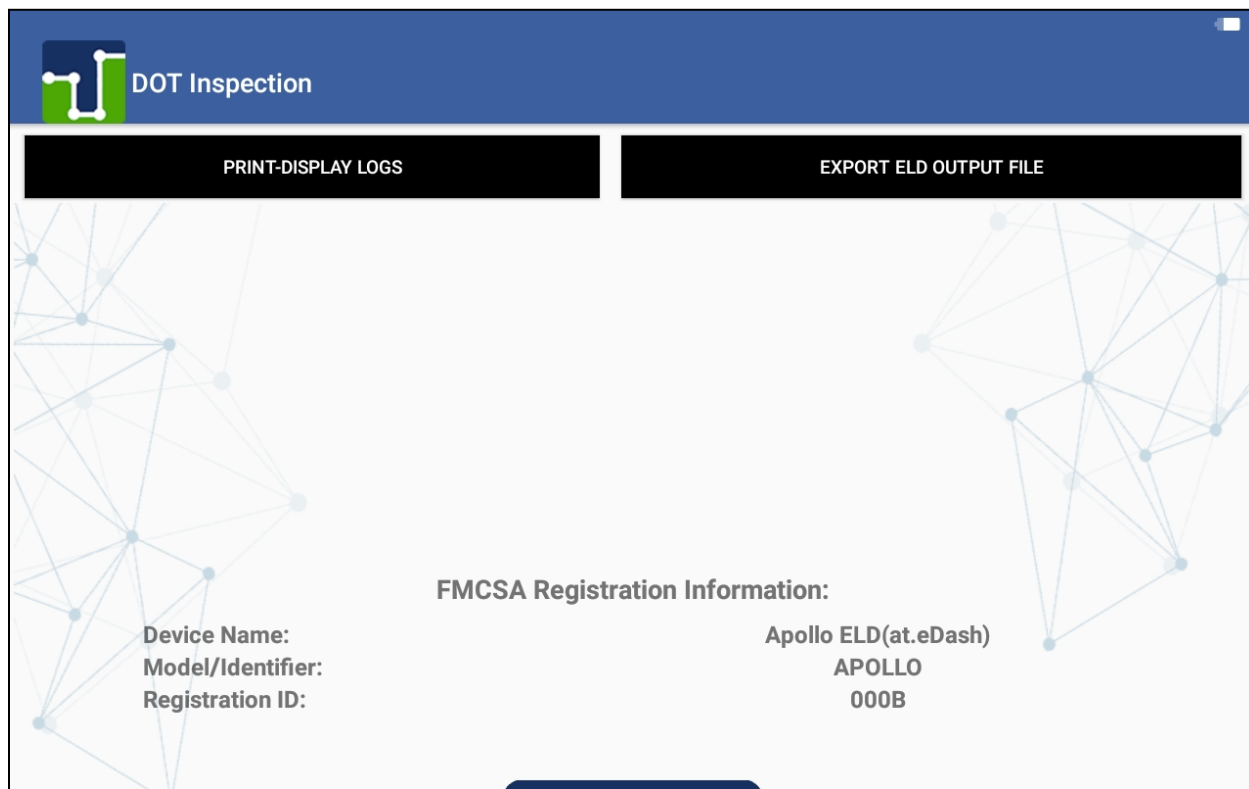


To exit the DOT Inspection Screens the Driver will need to enter their password:

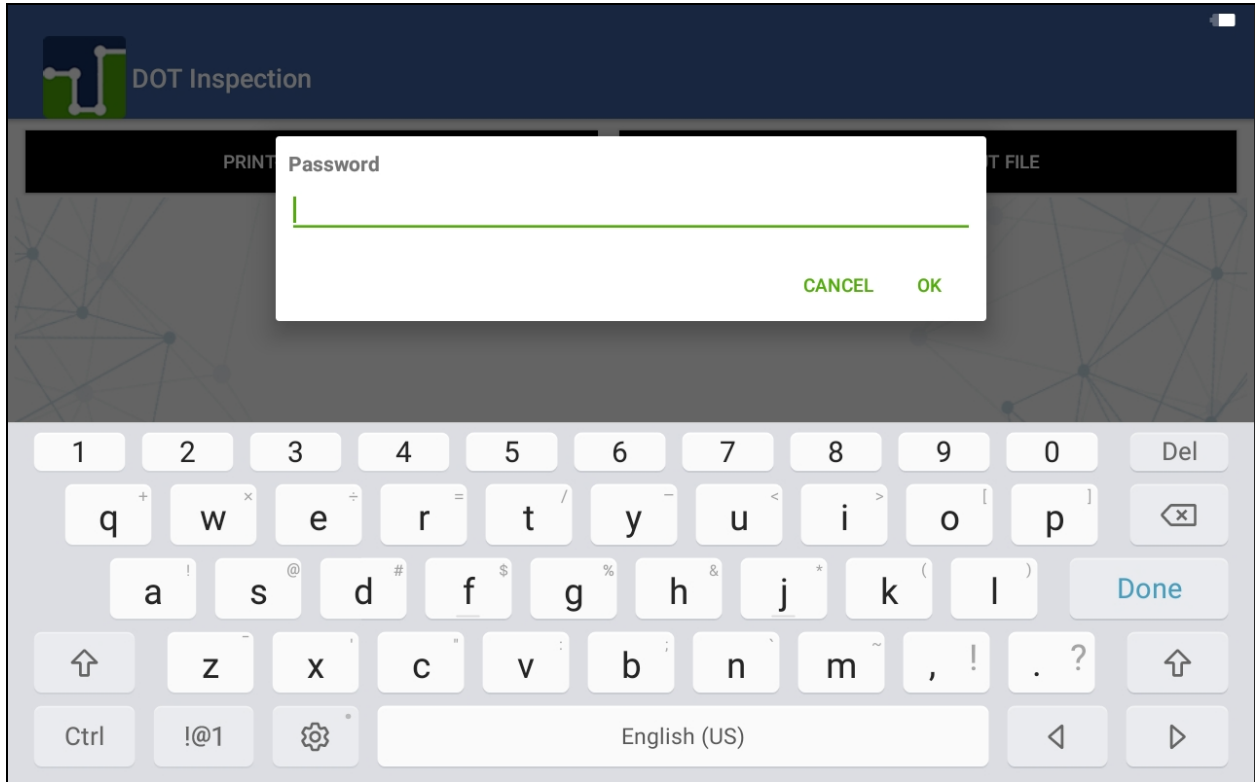


This will take you back to the Apollo Home screen:



Go Back to the DSA to enable Linxup ELD to access Linxup ELD Logs

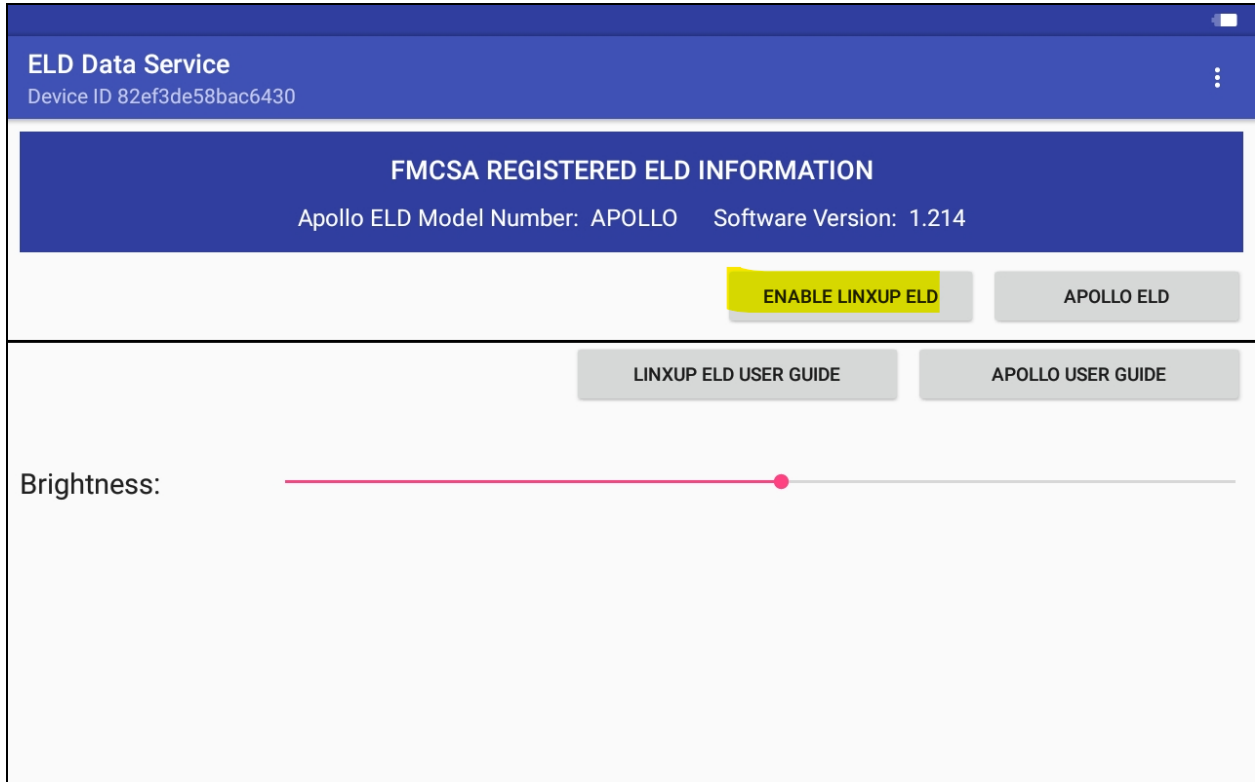


After Selecting Enable the option for Linxup ELD will appear. Select this to sign into Linxup ELD:

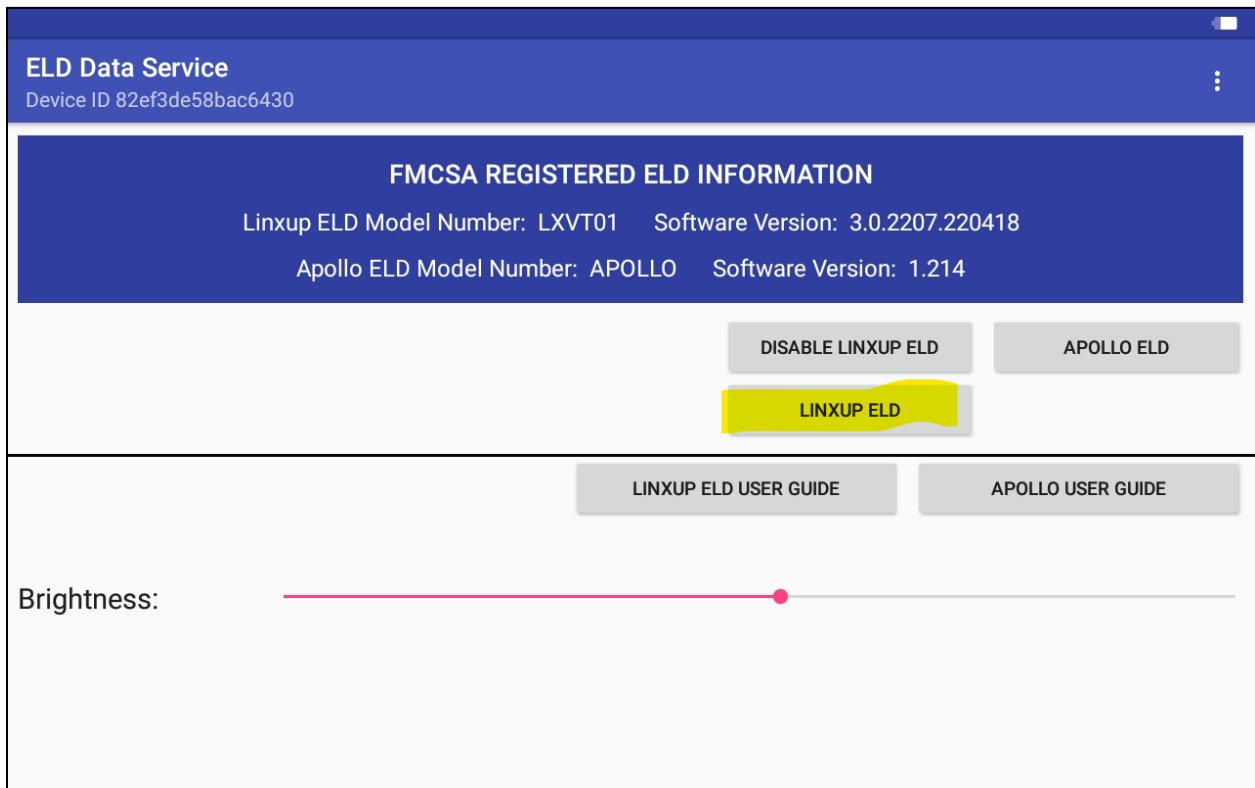


Enter in Username and Password:

From the Linxup ELD Home Screen select "Roadside Inspection":


DOT Officer will have the options to choose how they want to review the logs:

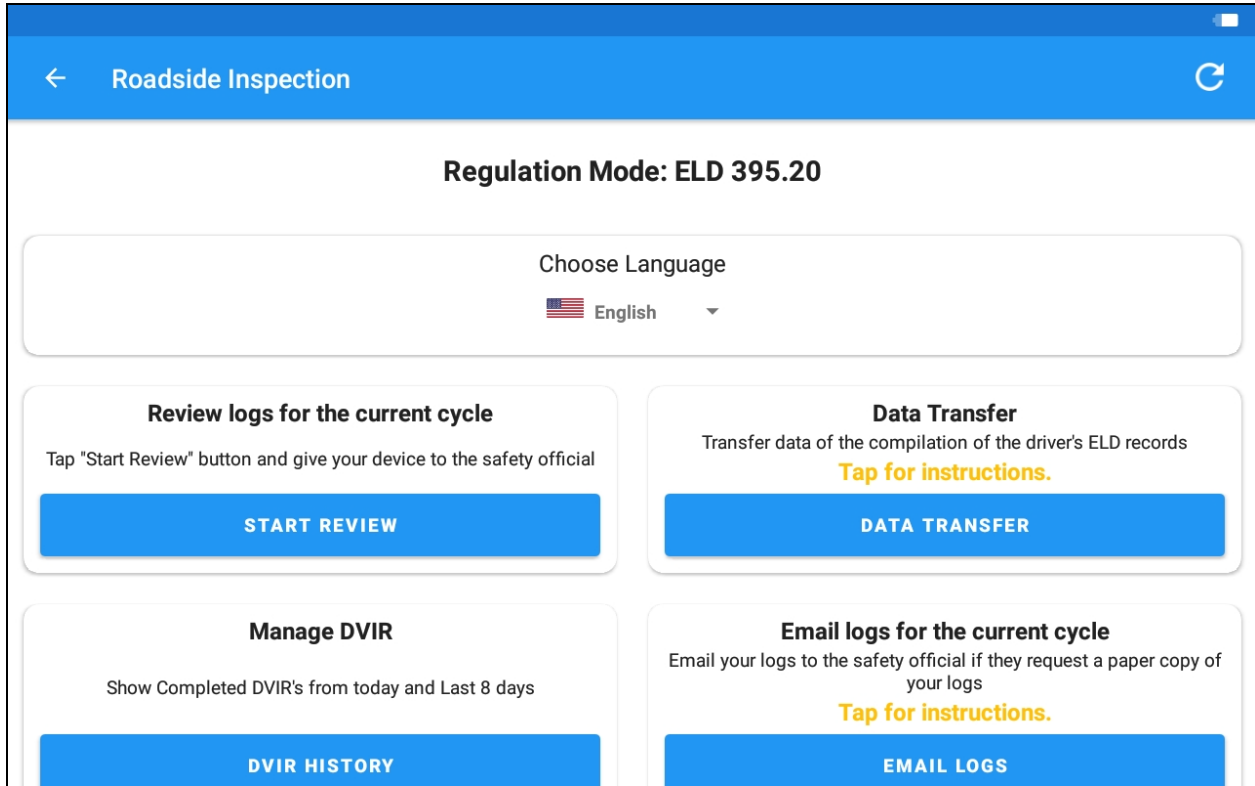


To exit the DOT Inspection Screens the Driver will need to enter in their password:

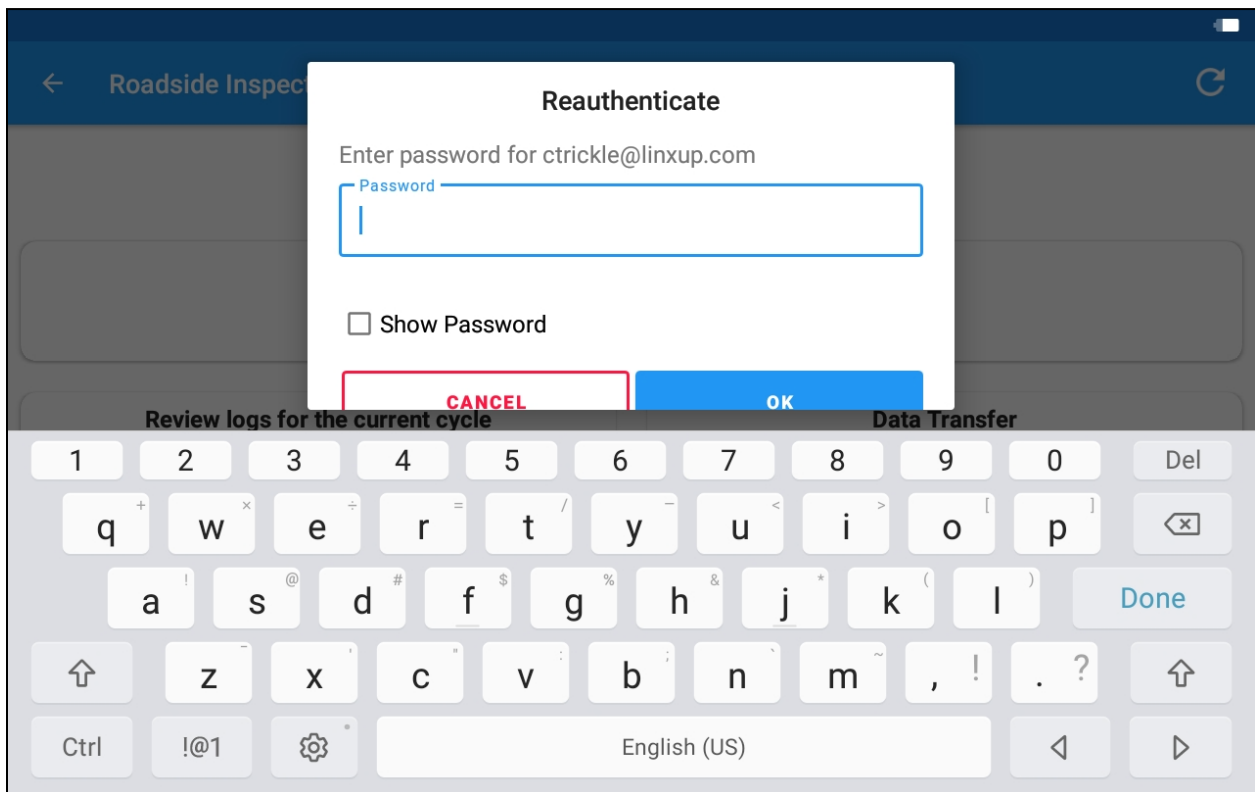

This will take you back to the Linxup ELD Home Screen:

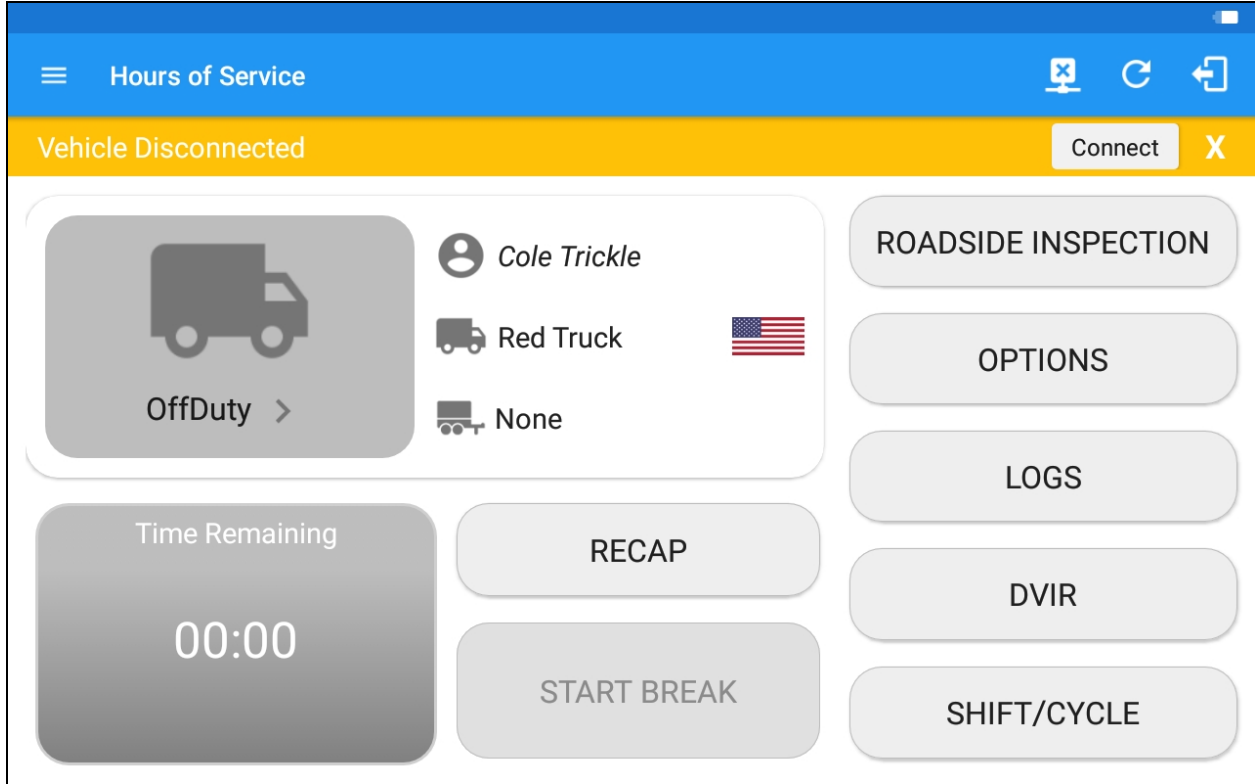

Select the back button to go to the DSA and Disable Linxup ELD:

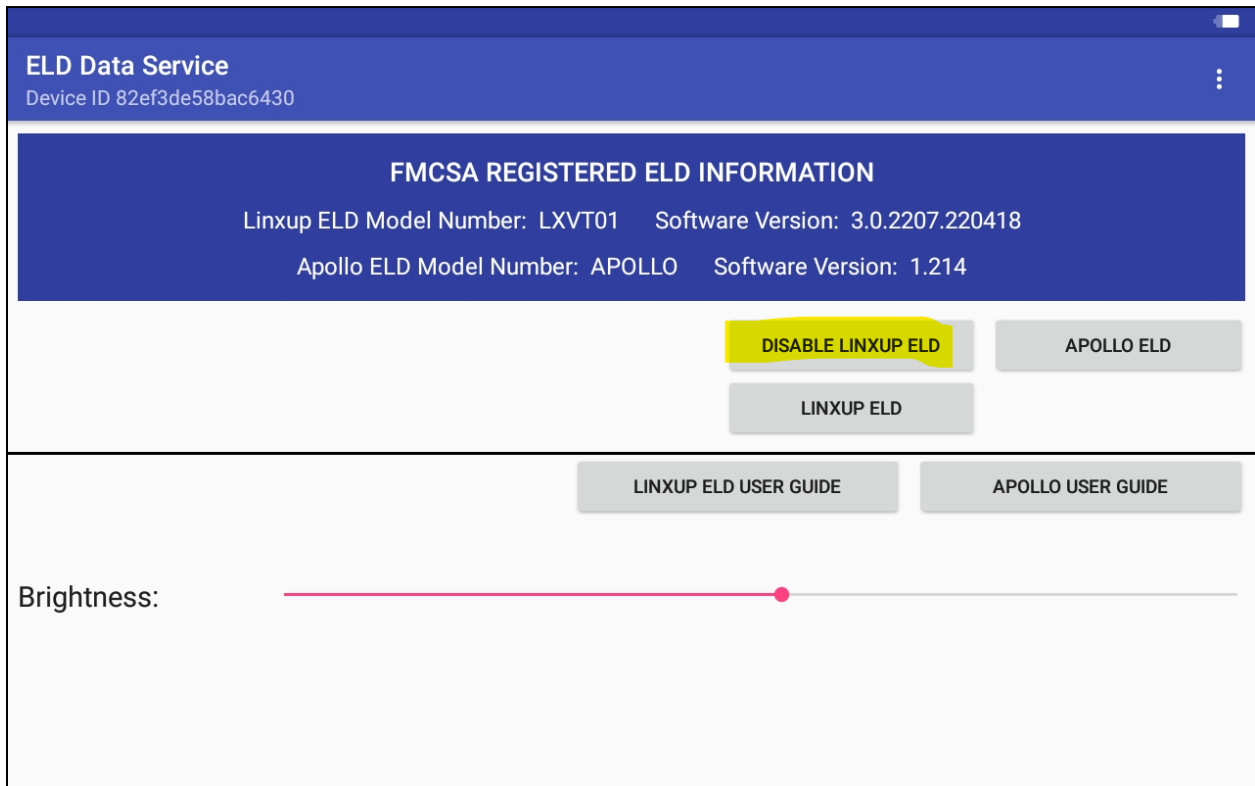

After selecting “Disable Linxup ELD” the option for Linxup ELD should disappear:

ELD Data Service
Device ID 82ef3de58bac6430

FMCSA REGISTERED ELD INFORMATION
Apollo ELD Model Number: APOLLO Software Version: 1.214

[ENABLE LINXUP ELD](#) [APOLLO ELD](#)

[LINXUP ELD USER GUIDE](#) [APOLLO USER GUIDE](#)

Brightness: 