


# Apollo ELD Tablet Update for Drivers

You must **STOP** after completing Step 4 and wait until your current duty cycle ends before continuing to the next step.


**Reminder:** You will be able to delay updating your tablet **twice** by selecting **“Remind me Later”**. After delaying two times, the system will require you to complete the update.

## Steps to update your tablet:



- 1 Turn your tablet on. Once your tablet checks in with the network you will receive a notification to update your system. If you do NOT see the notification, please select **“Check for Updates”**.

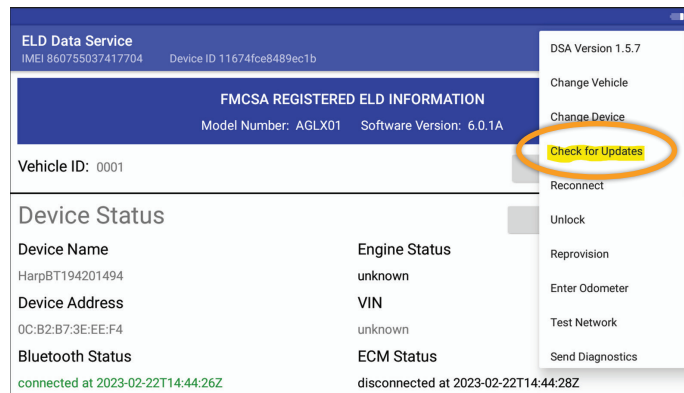

- 2 Select **“INSTALL NOW”** for update available


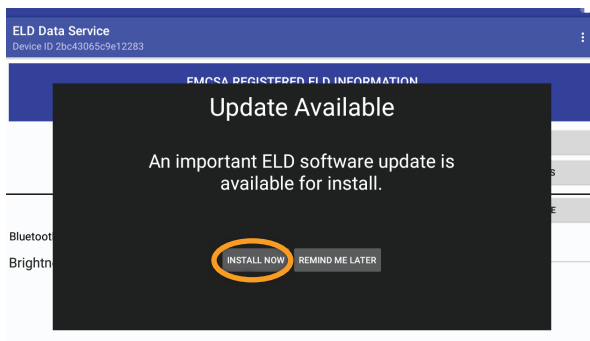


- 3 Select **“INSTALL”** for Apollo ELD, then select **“DONE”**

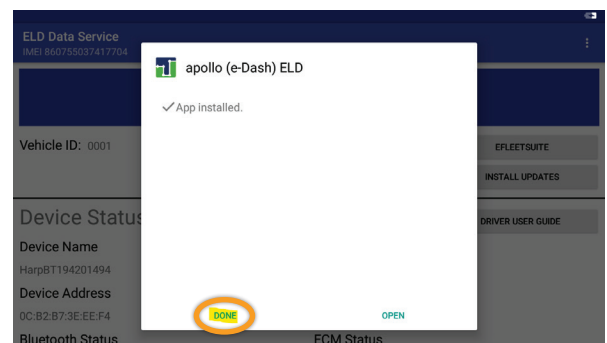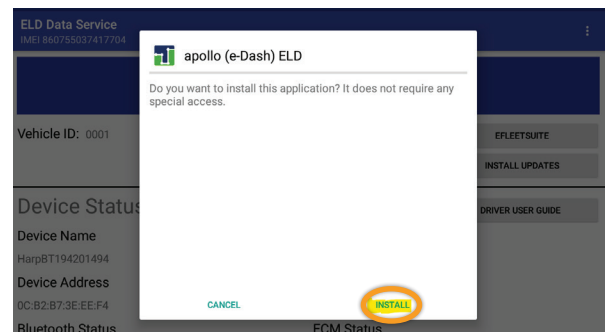

- 4 Select **"INSTALL"** for ELD Data Service. You should now see options for both Apollo ELD and eFleetSuite, with the option to disable eFleetSuite. **DO NOT DISABLE EFLEETSUITE UNTIL YOUR CURRENT DUTY CYCLE ENDS.**

**NOTE:** After your tablet has been updated you will receive this message when selecting eFleetSuite. **Please continue to use eFleetSuite until your duty cycle is completed.**

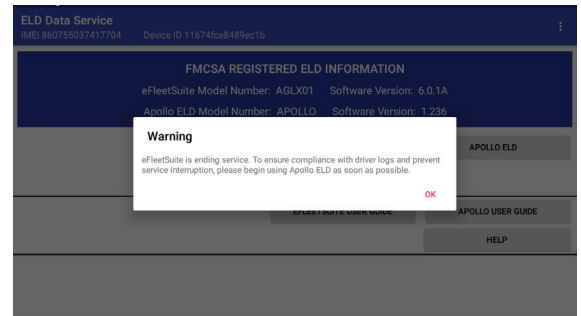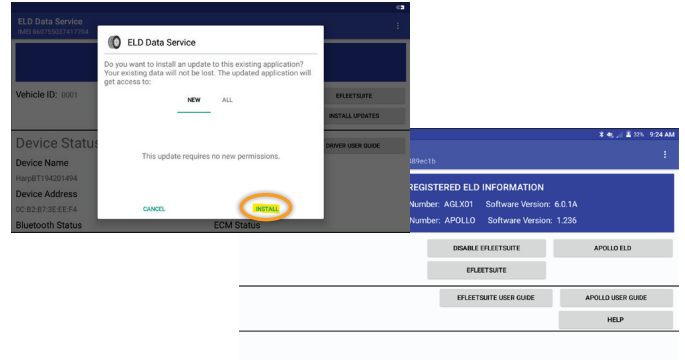


STOP

DO NOT CONTINUE TO THE NEXT STEP UNTIL YOU HAVE COMPLETED YOUR CURRENT DUTY CYCLE.

*Did you disable eFleetSuite before your current duty cycle ended? If so, proceed to page 6 for help.*



## Once your current duty cycle ends:

- 5 After your current cycle, select **"DISABLE EFLEETSUITE"**. At this point, Apollo ELD should automatically connect to your existing JBUS device. If it needs to be connected manually please see the instructions to **Connect your tablet to a JBUS device** on page 4.

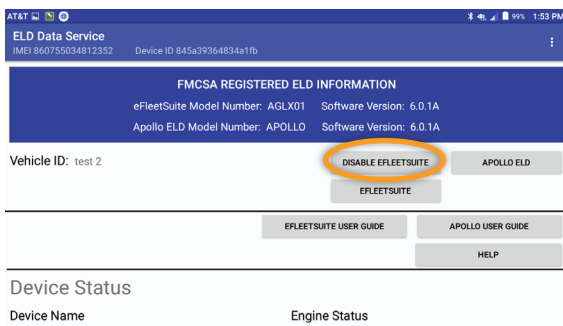



**NOTE:** Once you have disabled eFleetSuite, the eFleetSuite ELD button will no longer be available. Select **"APOLLO ELD"**

**NOTE:** If you receive this message when selecting APOLLO ELD after your duty cycle, please ensure eFleetSuite is disabled

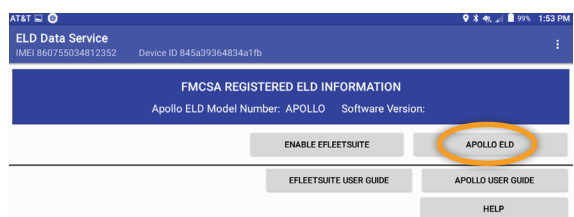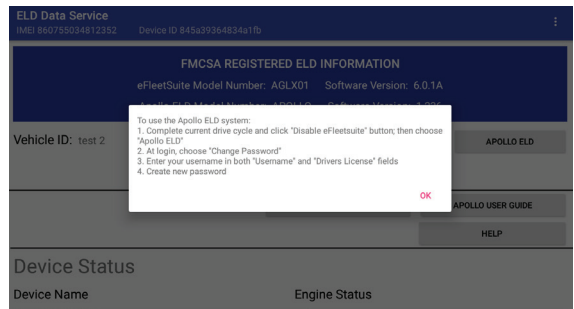


**6** "ALLOW" access for:


- Photos, media, and files on your device
- Your device's location

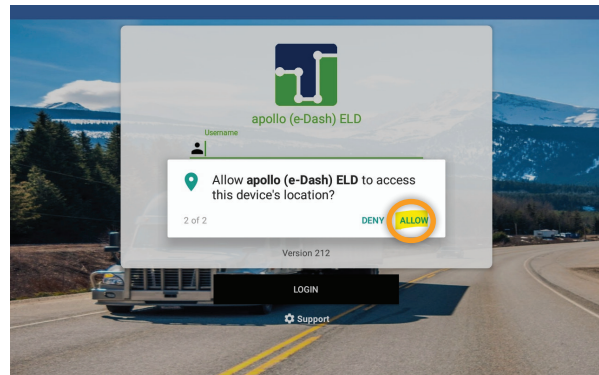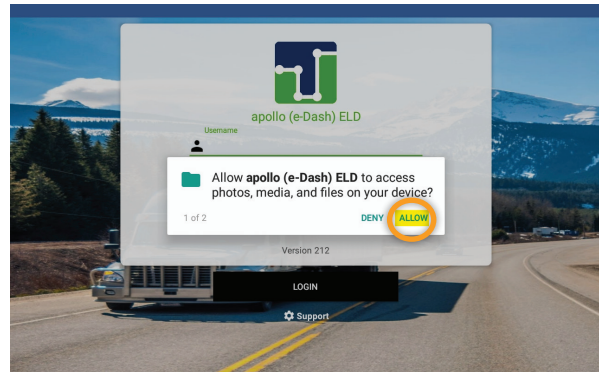

**7** Review and "AGREE" to permission information

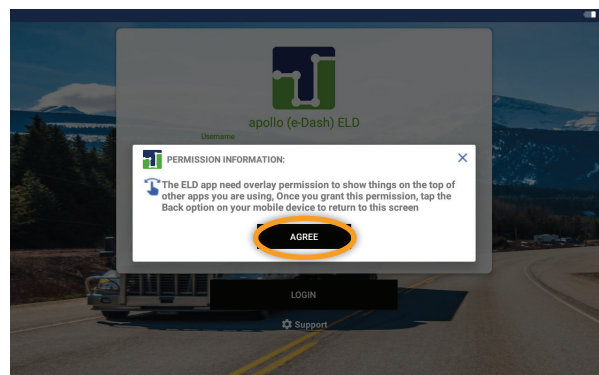


**8** Allow permission for Apollo ELD to appear on top of other apps.

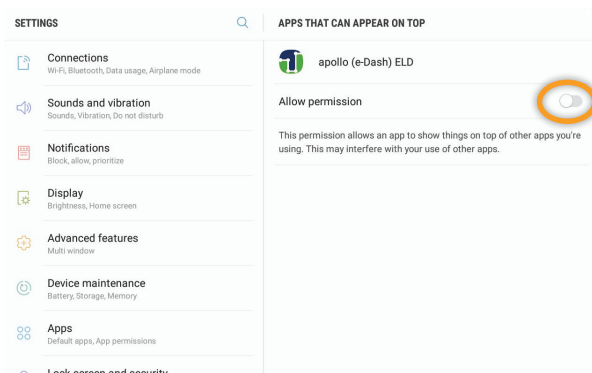


## Logging into Apollo ELD for the first time:

- 1 Click the back button to return to the login screen
- 2 Select "Change Password"

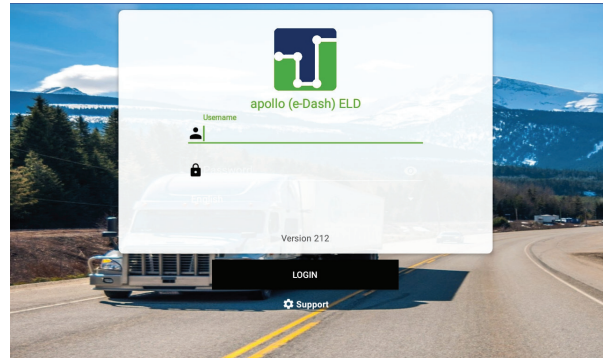


- 3 Enter your eFleetSuite username in the "Username" field. Enter your eFleetSuite username followed by your company DOT# (i.e. jsmith12345678) in the "Driver's License" field.


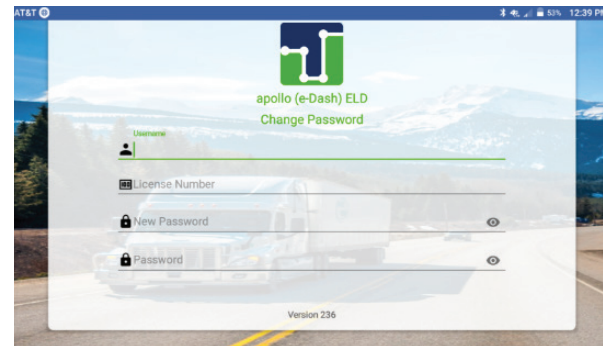


## Connect your tablet to a JBUS device:


- 1 When logging in for the first time you will need to select or create a vehicle profile.

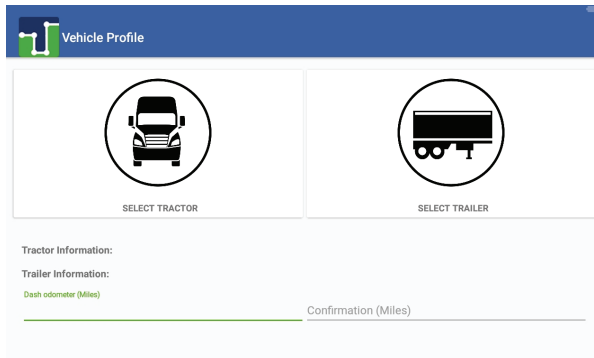


- 2 Update the vehicle profile information.

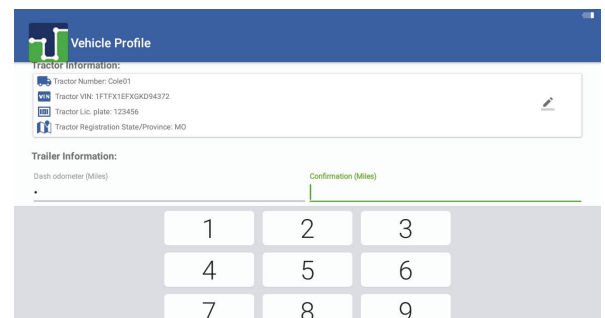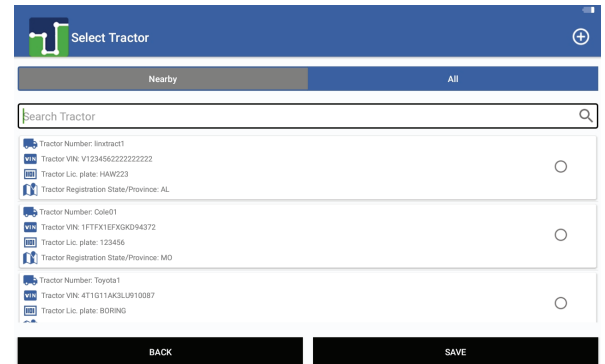


**3** After vehicle profile information has been entered you will need to pair the tablet with a JBUS device. Select **"SCAN DEVICES"** to find the JBUS device.

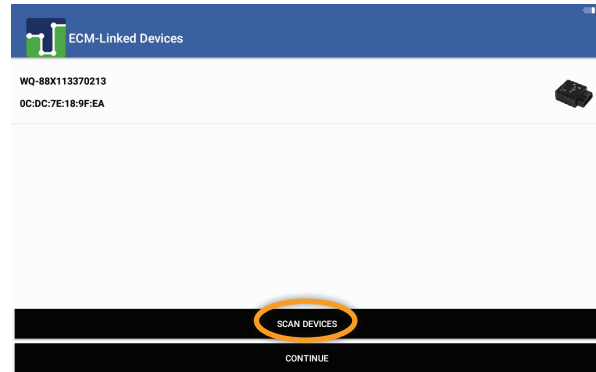


**4** Once the JBUS device has been found click on the correct device and select **"CONTINUE"**

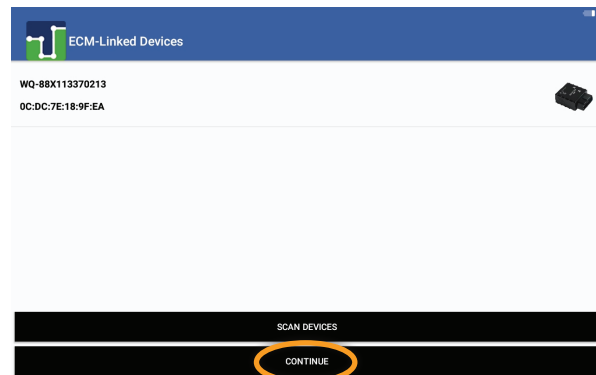

**5** You will be taken to a Diagnostics screen. Select **"RUN ELD DIAGNOSTIC"** to confirm the tablet is receiving all information required from the JBUS device (all fields should be green)

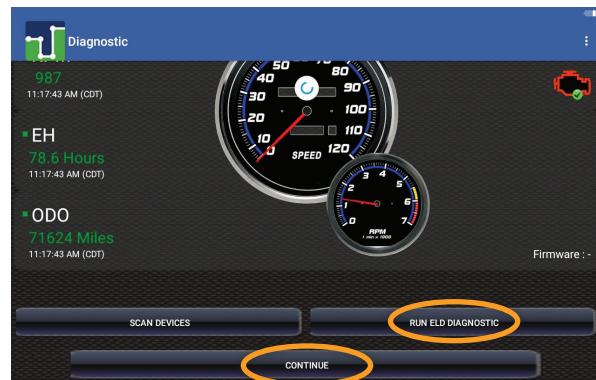

**6** Select **"CONTINUE"** to return to the homescreen

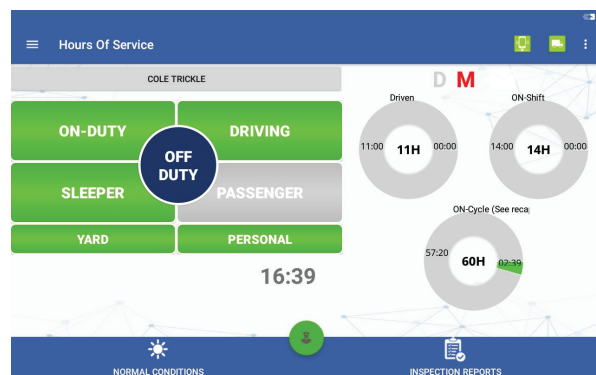


## Steps to re-enable eFleetSuite if it was disabled before your current duty cycle ends


**NOTE:** If you are currently on the Apollo ELD login screen you will need to hit the back button on your tablet to return to the DSA screen below.



- 1 Select **"ENABLE EFLEETSUITE"**

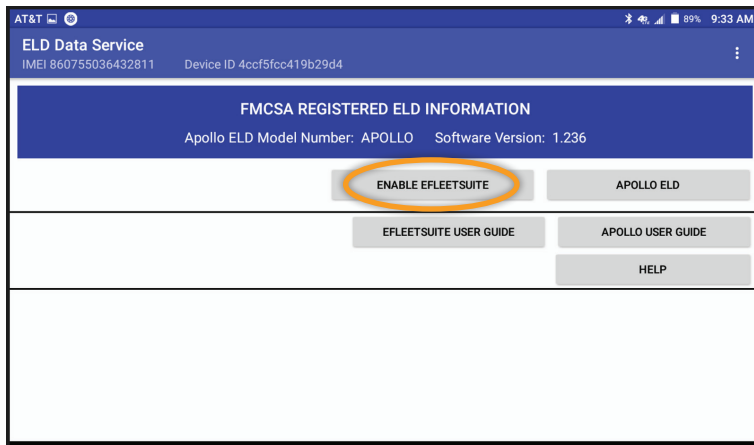

- 2 You will be prompted to allow iseWatchdog. **Please select the toggle to allow.**

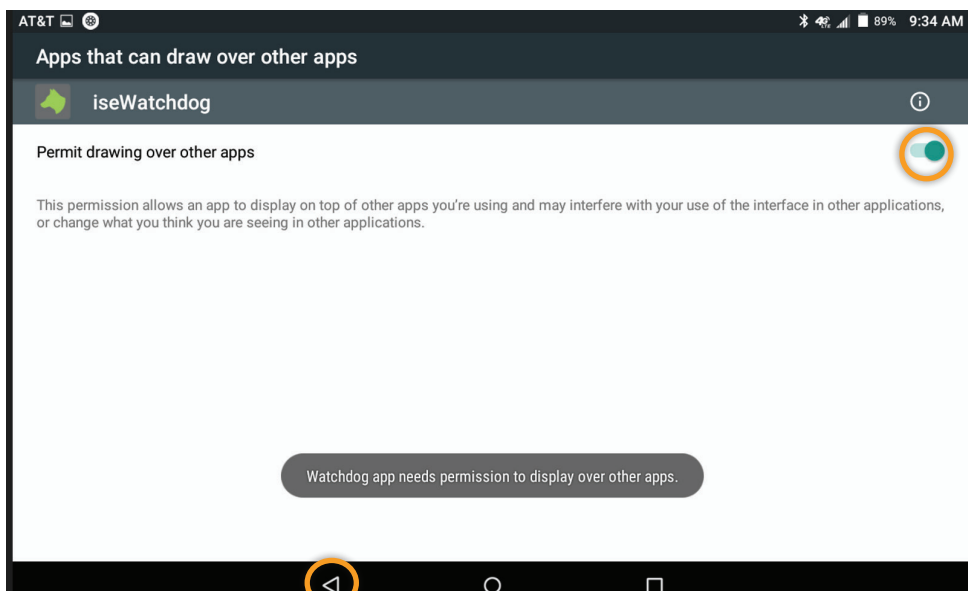

- 3 Click the **back arrow** to exit this screen to return to the DSA and log back into eFleetSuite.